

SERVICE AND REPAIRS

All quality tools eventually require servicing or replacement of parts due to wear from normal use. All the repairs shall be carried out only by agents authorised by the manufacturer or by other specialists, having due regard to the information given in the operating instructions.

NOTE: Specialists are those who, as a result of professional training or experience, have sufficient expertise in the field of fastener driving tools and sufficient familiarity with relevant governmental industrial protection provisions, accident prevention regulations, directives and generally recognized technical regulations, to be able to assess the safe working condition of fastener driving tools.

Only original spare parts available by Ottensten Polska SP. Z o.o. shall be used to repair the tool.

Some of the possible faults are described in the Troubleshooting section.

Should you have any questions about your tool, please contact with us any time. In any communications, please give all information shown on the nameplate of your tool (model number, type, serial number, etc.).

TROUBLESHOOTING

WARNING: Disconnect tool from air supply and empty the magazine before performing any service procedure. All the repairs should be carried out by specialists.

PROBLEM	PROBLEM CAUSE	CORRECTION
1. Air leaking near top of tool or at trigger area.	Loose screws. O-ring or seal is worn or damaged.	Tighten screws. Replace damaged or worn components.
2. Tool does nothing or operates sluggishly.	Inadequate air supply. Inadequate lubrication. O-rings or seal is worn or damaged.	Supply adequate air supply. Place 5 or 6 drops of oil into air inlet. Install "TOP" Maintenance Kit.
3. Air leaking near bottom of Tool.	Loose screws. O-rings or seal is worn or damaged.	Tighten screws. Replace damaged or worn components.
4. Tool jamming frequently.	Incorrect fasteners. Damaged fasteners. Magazine or nose screws loose. Magazine is dirty. Driver is worn or damaged.	Supply approved fasteners of correct size. Replace undamaged fasteners. Tighten screws. Clean magazine. Replace damaged or worn components.
5. Other.		Contact a local agencies.

Technical drawing 4PROFN34100

